

13- Inside vertical bend 90 degree

NOTES:



1. Each inside vertical bend need 2 pcs (U) shape connector
Or 4 pcs straight connector.

2. (?) → **H.D.G: Hot dip galvanized**

P.G: Pre galvanized

C: Colored

ORDER CODE	A mm	H mm	T mm
B13-5HT-?	50	40-50	1 - 1.25
B13-10HT-?	100	40-50-60-100	1 - 1.25 - 1.5 - 2
B13-15HT-?	150	40-50-60-100	1 - 1.25 - 1.5 - 2
B13-20HT-?	200	40-50-60-100	1 - 1.25 - 1.5 - 2
B13-25HT-?	250	40-50-60-100	1 - 1.25 - 1.5 - 2
B13-30HT-?	300	40-50-60-100	1.25 - 1.5 - 2
B13-40HT-?	400	40-50-60-100	1.25 - 1.5 - 2
B13-50HT-?	500	40-50-60-100	1.5 - 2
B13-60HT-?	600	40-50-60-100	1.5 - 2
B13-70HT-?	700	40-50-60-100	2
B13-80HT-?	800	40-50-60-100	2
B13-90HT-?	900	40-50-60-100	2
B13-100HT-?	1000	40-50-60-100	2

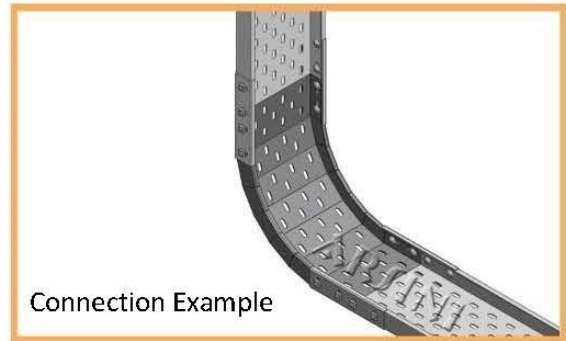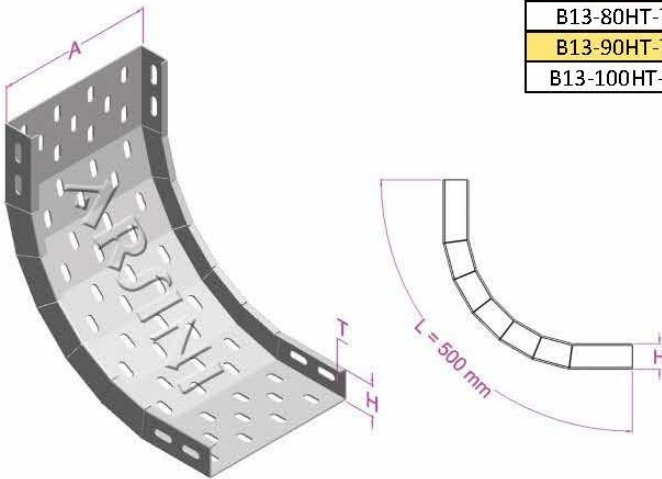

14- Outside vertical bend 90 degree

NOTES:

1. Each outside vertical bend need 2 pcs (U) shape connector
Or 4 pcs straight connector.

2. (?) → **H.D.G: Hot dip galvanized**

P.G: Pre galvanized

C: Colored

ORDER CODE	A mm	H mm	T mm
B14-5HT-?	50	40-50	1 - 1.25
B14-10HT-?	100	40-50-60-100	1 - 1.25 - 1.5 - 2
B14-15HT-?	150	40-50-60-100	1 - 1.25 - 1.5 - 2
B14-20HT-?	200	40-50-60-100	1 - 1.25 - 1.5 - 2
B14-25HT-?	250	40-50-60-100	1 - 1.25 - 1.5 - 2
B14-30HT-?	300	40-50-60-100	1.25 - 1.5 - 2
B14-40HT-?	400	40-50-60-100	1.25 - 1.5 - 2
B14-50HT-?	500	40-50-60-100	1.5 - 2
B14-60HT-?	600	40-50-60-100	1.5 - 2
B14-70HT-?	700	40-50-60-100	2
B14-80HT-?	800	40-50-60-100	2
B14-90HT-?	900	40-50-60-100	2
B14-100HT-?	1000	40-50-60-100	2

